

## Appendix D

# Access Codes

Access codes are used to restrict unauthorized access to sensitive program data. There are two levels of access available, level 1 and level 2. Both levels prevent creation, modification and deletion of programs and ISCs, including setup data. In addition, level 1 code prevents the user from using "manual on/off" operations.

### Entering an Access Code

#### Procedure:

**Step 1** Advance to the Access Code Entry screen as follows:



F1=Main Menu  
 F5=Setup  
 F4=Controller  
 F3=User Option  
 F3=Access Code

**ACCESS CODE:  
 ENTER ACCESS CODE**



Figure 196: Access Code

**Step 2** Enter the access code. The access code must be three digits. Press ENTER.

**Note:** *The first time an access code is entered, any three-digits may be used. Thereafter, the access code you enter is checked against the code stored in the controller. The code you enter must match the stored code, or access is denied to certain menu options, as shown in the table in the next section of this Step 4 Press F1=Restrict Access or F2=No Restrictions. The previous menu is displayed.*

If the access code is correct, the following three options are displayed:

 


**Figure 197: Access Code Options**

- Select ENABLE/DISABLE ACCESS to turn on and off the use of the access code.
- Select CHANGE LEVEL to change the access code level.
- Select CHANGE CODE to enter a new access code.

### Step 3 Access Restriction

Select F1=ENABLE/DISABLE ACCESS. The following two options are displayed:



**Figure 198: Access Restriction Status**

The two options are:

- Select **RESTRICT ACCESS** to use the access code to control use of the controller.
- Select **NO RESTRICTIONS** to not use the access code.

**Step 4** Press **F1=RESTRICT ACCESS** to select Restrict Access or **F2=NO RESTRICTIONS** to select No Restrictions, or **No Access Code Required**. The Access Code Options menu is displayed.

**Step 5** **Access Change Level**  
Select **F2=CHANGE LEVEL**.



**Figure 199: Level Access Selection**

There are two options, **LEVEL 1** and **LEVEL 2**. The Access Level Options table lists the restrictions applicable for each level. Press **F1** to select Level 1 or **F2** to select Level 2. The Access Code Options menu is displayed.

**Step 6** **Change Code**  
Select **F3=CHANGE CODE**.  
Enter the new access code (the code must be three digits), then press **ENTER**.

The Access Code Options menu is displayed.

### Using Access Codes

After the access code is entered, access to the menu items shown in the following table is restricted.

**Table 5: Access Level Options**

Menu	Access Level	Access Denied
Main Menu	1	F1, Program F2, ISC F4, Manual Operation
	2	F1, Program F2, ISC
Set Up	1,2	F1, Program F2, ISC F3, Stations F5, Sensors
Setup Menu, F4, Controller	1,2	F2, Omit By Date
User	1,2	F1, Time/Date F2, Language

When access codes are used, the menu items listed in the Access Level Options table are denied and the following screen is displayed:

 


Figure 200: Access Denied Display

**Gain Access Procedure:**

**Step 1** To gain access to all controller menu options, from the base screen, advance to the Access Code Entry menu as follows:



- F1=Main Menu
- F5=Setup
- F4=Controller
- F3=User Option
- F3=Access Code



Figure 201: Access Code

**Step 2** Enter the correct three-digit access code, then press ENTER.  
If the access code is correct, the Access Code Options Menu is displayed:



**Figure 202: Access Code Options**

**Step 3** Select F1=ENABLE/DISABLE ACCESS. The following two options are displayed:



**Figure 203: Access Restriction Status**

**Step 4** Select F2=NO RESTRICTIONS if access code is not used.

This completes the Access Code procedure.

Press the QUIT key to return to the base screen.